



OPERATION MANUAL

MOTOR CARE TIPS

Your TPP motor is water lubricated and cooled. To stay in good working condition, it needs to be properly cared for. Follow the tips below to ensure you do not void your warranty and keep your system in great shape.

- Rinse with fresh water after each use. Wash thoroughly by immersing or spraying with fresh water, after use especially in saltwater environments.
- Remove excessive dirt/debris by following one of our cleaning videos on YouTube or FAQ. Removing the nose cone allows best cleaning access.
- Spray corrosion inhibitor into shaft/bearing area after cleaning. Using the recommended spray can reduce corrosion in marine environments.



- Apply dielectric grease to connector pins to reduce corrosion.
- Replace damaged prop. If you damage your prop replace it as an off-balance prop causes excessive bearing wear.
- Replace bearings annually with the motor tune-up kit. The motor uses synthetic plastic bushings that can wear over time. Replacing them before they are too worn will eliminate the chance of damaging the rotor.

Bearing Replacement Using Tune-Up Kit



Need help? Scan QR

Contact Us:
sales@texaspowerpaddle.com
for further support.